


Use and Maintenance

- SW900

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

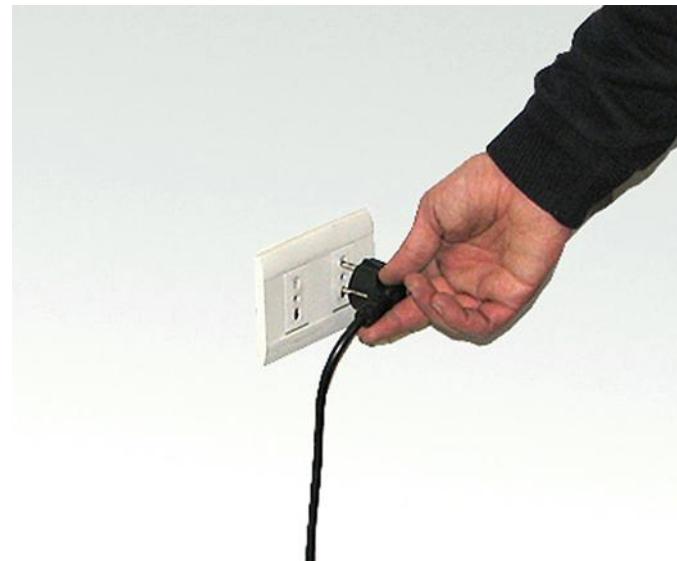

1. Disconnect the battery charger cable from the electrical main.



2. Adjust the handlebar by using the lever



3. Turn the ignition key to "I" without pulling the drive control lever.



4. Lower the side broom by pulling the lever backwards.



5. Activate the traction by pulling the lever.



6. Drive the machine straight forward. Adjusting speed depending working conditions/quantity of debris.



7. Activate the filter shaker switch every 10 min.



8. When operating on wet floors, open the "wet by-pass" port to avoid damaging the dust filter. Close the "wet by-pass" port to restore proper vacuuming.




9. Release the traction lever, lift the side broom by and turn off the machine with the ignition key "0".



10. Remove the hopper by pulling the handle and drive it to the area of disposal and empty it and put the hopper back on the machine



11. Check the main and side broom and remove any debris like straps, rope etc..

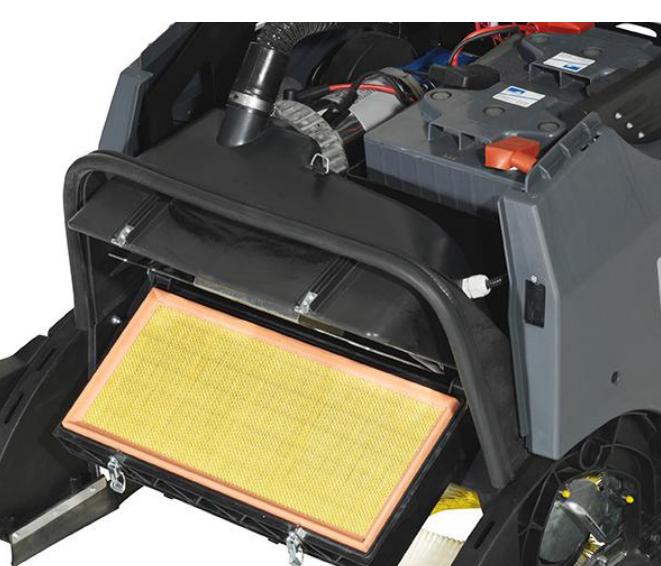

12. Remove and clean the dust filter as indicated into the manual.



13. Clean the machine by using a damp cloth and where needed use a neutral cleaning product.



14. Connect the battery charger cable to the electrical main



15. Park the machine into dry and clean storage area.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (10-12 hours) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.


PLEASE ENSURE GREY SOCKET IS LEFT DISCONNECTED AFTER RECHARGE IF THE MACHINE IS NOT TO BE USED ON A DAILY BASIS

Troubleshooting

- SW900

ATTENTION! Do not use the machine before you have read and understood the Instructions for User Manual

The machine
doesn't work
as it should?

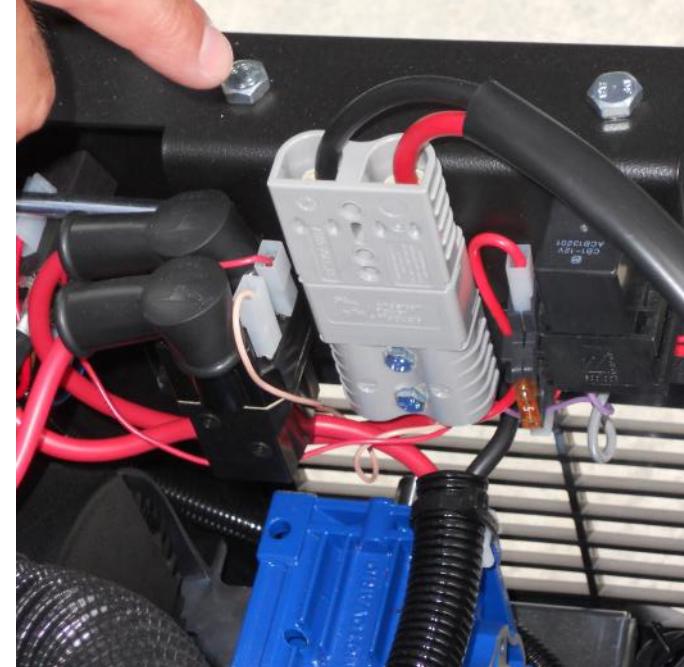

1. Check if the battery is charged and that the charger cable is disconnected from the main.

2. Check if the main battery connector is properly connected.

3. Check if the main circuit breaker is open.

4. Ensure that the upper cover and hopper is in the right position.

The machine does
not collect debris/
dust




1. Check if the flaps are correctly adjusted and not worn out.

2. Check if the panel filter is clean the gasket properly sealing.

3. Check if the gasket is damaged.

4. Check if the hopper is full.

The machine do
not sweep.

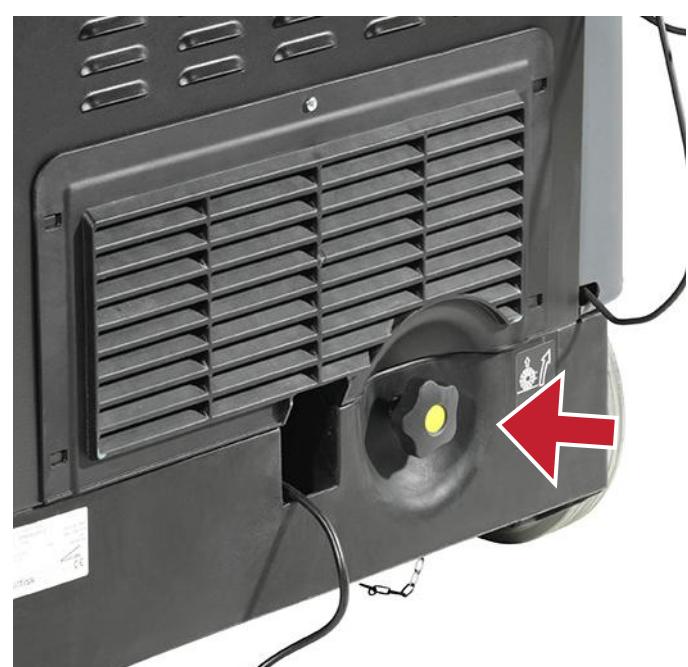

1. Adjust the main broom position by the knob.

2. Adjust the side brooms position by the register screw.

3. Check if there are external materials avoiding brush rotating.

4. Check if the circuit breaker for side brooms is open.



5. Replace the brooms if the bristles are wornout.